



WESTWOOD

BATH

●

THE MANUAL OF THE ONE-PIECE INTELLIGENT TOILET

Thank you for your great love for our products!

Please read this instruction before installation. After reading, please save it properly for future reference. The final interpretation of this manual is owned by the company and is subject to change without notice. Including warranty card, please keep it safe.

1 SAFETY PRECAUTIONS

Please read this manual carefully before installation and strictly follow the instructions. After reading, please keep this manual in a prominent place. In order to avoid injury and property damage to users and others, please strictly observe the safety warnings and precautions.

⚠ WARNING Indicates that failure to comply with this warning may result in serious injury or death.

⚠ PAY ATTENTION Indicates that personal injury or property damage may be caused if the operation is not carried out in accordance with the provisions of this note.

SIGNS	⚠ WARNING
⊗	Lit Cigarettes and other burning objects can not be put into the toilet bowl, otherwise it may cause a fire.
⊗ FORBIDE	1. Do not disassemble, repair or modify the product on your own, otherwise it may cause fire or electric shock. 2. Do Not pour water or detergent on the body or plug, otherwise it may cause fire or electric shock. 3. Do not use wet hands to plug or pull the plug, or you may get an electric shock. 4. Do not use other electrical appliances in the same socket. 5. Do not use extension cords or loose loose unstable power sockets, which may cause fire or electric shock. 6. If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer, its maintenance department or a professional from a similar department. 7. This product is an electrical appliance and should not be exposed to water. Do Not Spray Urine or other liquids on the body. 8. Do not use your fingers or other objects to plug the air outlet or you may get scalded, electrocuted or burned. 9. When the product is energized, do not put the product on its side or upside down, otherwise it may cause fire or burn down.
⚠ MUST BE OBEYED	1. Please do not install and use this product in the wet place such as the bathroom. 2. This product must be reliably grounded, if not sure whether it has been reliably grounded, please let a qualified electrician or maintenance personnel check and confirm. 3. Please ensure that the power outlet used by the product complies with the National Standard (zero or so fire) , can not be connected to the reverse. 4. This product must be connected to AC220V / 50HZ, load current at least 10A special standard socket and wiring, and socket must, equipped with Earth fault breaker or earth leakage protector or similar high sensitive and fast leakage switch (rated sensitive current below 15mA) . The socket position should be installed in the place which is not easy to be dripped by water. It is suggested to use waterproof socket. The installation should use the new hose assemblies and other attached or specified parts that come with the appliance. The old hose assemblies can not be reused, or they may cause water leakage, fire or electric shock. 6. When the product from the cold or wet place to move indoors, first placed 2 hours, so that the machine fully volatile condensate, and then boot to use, so as not to cause product short circuit.

SIGNS	⚠ WARNING
⊗	Pull out the power plug when there is thunder. Do not place the product where it may fall into or be pulled into the bathtub or sink. Do not place product in water or other liquids. Do not touch products that have fallen into water or are immersed in water. Unplug the power plug immediately. Please do not stand on a ceramic toilet. The ceramic toilet must be fitted with anchor bolts. Do not use water other than tap water, or it may cause skin inflammation and other problems. Please do not let the sun direct irradiation products, so as to avoid product discoloration and affect the remote control reception effect. This product seat and cover has slow down function, please do not press hard, so as not to damage the slow down device. Do not apply force or impact. Do not stand on seat ring, cover or body. Do not place heavy objects. Do not use banana water, gasoline, lotions and detergents, pesticides, toilet cleaners and hard bristles to clean this product. Please stop using and cut off the power supply immediately when the product function is abnormal or malfunction, and contact the service provider in time.
⚠ MUST BE OBEYED	When installing, disassembling, repairing and maintaining the product, you must unplug the power plug and close the water supply valve. If the room temperature is below 0 ° c, the water in the tank must be drained to prevent the tank from cracking. If it is not used for a long time, the power must be cut off and the water in the tank must be drained. People with physical, sensory, intellectual, or experience and lack of common sense (including children) need to use this product under the supervision of a special person. Do not let children play with this product. To prevent damage caused by freezing, please implement warm measures to raise the temperature of the toilet.

2 DAILY MAINTENANCE


BODY MAINTENANCE

1. Please cut off the power when maintaining the body.
 2. Please wipe the dirty area with a soft cloth wrung out of water.
 3. Please power on the machine again after wiping.
- Warm tip: please do not use water to wash the surface of the product.

MAINTENANCE of NOZZLE

The dirt on the nozzle, according to the following methods maintenance: 1. When the human body is not seated, press the "hip wash" key or the "child wash / self clean" key of the remote control.
 2. Press the host "power" button or the remote control "stop" button to retract the spray Rod.
 TIPS: Do not pull the spray rod, so as not to damage the spray rod and motor. The nozzle can be removed and cleaned separately.

3 INSTRUCTIONS for REMOTE CONTROL

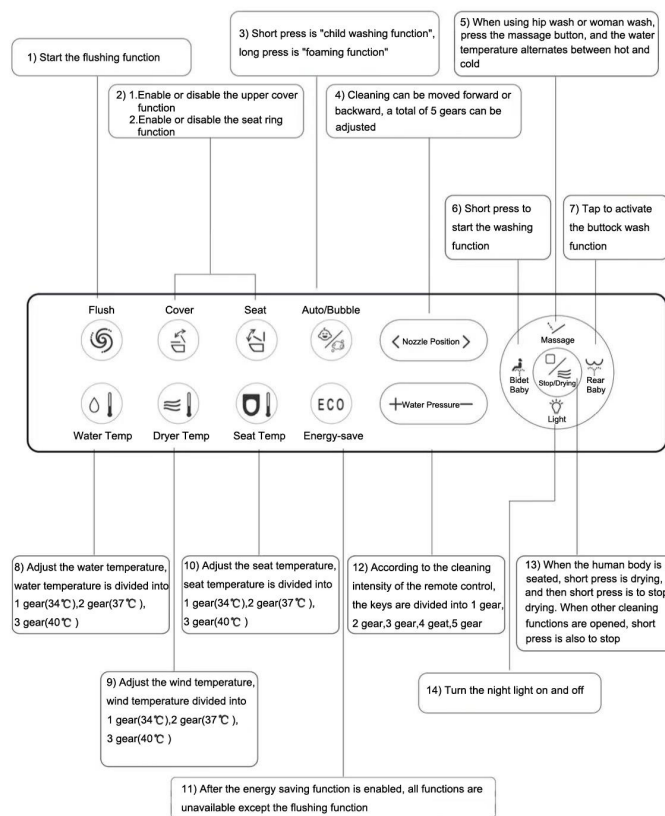

FOAMING FUNCTION: The foaming function is completed when the person is seated, and the foaming time is 15 seconds. The foaming stops when any cleaning function or flushing function is operated during the foaming process. When the person is not seated, long press the power saver Press the key, long beep is foam on, short beep is foam off.

ICROWAVE FUNCTION: 1. The person will automatically flip the lid when approaching. After the lid is flipped, the microwave will sense someone's signal, and the lid will never fall.
2. Microwave distance adjustment, press the hot and cold massage button on the remote control to adjust the microwave induction distance, and judge the current gear according to the prompt sound.
3. When there is a microwave function, when the person is close to the microwave induction flip, the second foot feeling or remote control press the flip button is open, (the remote control press the flip button is closed). The third foot sense or remote control press the flip button is closed Circle (automatically close the lid and flush the water 2 minutes after the person leaves).
4. When there is no microwave function, press the flip button for the first foot feeling or remote control to open the cover, press the flip button for the second foot feeling or remote control to open the loop, and press the "turn circle" button for the third foot sense or remote control for Close the cover and close the ring and flush.

BREATH SCREEN FUNCTION: No signal is detected by the microwave and no function is used within 5 minutes, it will enter the screen off state. If there is any function under the screen off state, or the microwave sensor has a signal, the screen off state will be released and return to normal.

FLUSHING FUNCTION: The flushing methods include manual flushing (power off flushing), off-seat flushing, remote control flushing, and lid flushing. The flushing time setting can be adjusted for a short time or a long time. The adjustment method is in the shutdown state, long press the remote controller water temperature button, short beep for a short time, long beep for a long time. (In the event of a power failure, the memory time of the last flush before power failure is used). Use the sense of foot or press the flip button on the remote control. The lap opens and starts timing. After 2 minutes, the cap will automatically fall and the lap will automatically flush. If there is flushing within 2 minutes, the lid will automatically fall after 2 minutes, and the ring will not automatically flush.

4 Operating instructions for knobs

Forward KNOB (counter-clockwise rotation) →
 SELF-CLEANING → FEMALE MOBILE CLEANING FOR
 2 minutes → drying for 3 minutes → stop.
 female fixed cleaning again counter-clock-
 wise rotation for female fully automatic
 mobile cleaning, FEMALE MOBILE CLEANING
 AGAIN COUNTER-CLOCKWISE rotation for the
 female fully automatic fixed cleaning.

Drying stop: In other functional states, press the
 button to stop the function. In other states, press
 the button to dry the function. When the cover
 plate is cut off, the hand press the cover plate
 knob to flush the water with the function of power
 off.

Forward KNOB (clockwise rotation) →
 self-cleaning → hip moving cleaning for
 2 minutes → drying for 3 minutes → stop.
 hip fixed cleaning again clockwise
 rotation for the hip full automatic
 moving cleaning, when the buttock moves
 cleanses, rotates clockwise once more for
 the buttock full automatic fixed cleans-
 es.

Status: Use Buttocks, children, hot and cold
 massage, fully automatic function for the blue,
 use for women when purple, when drying for red.
 People seated for the green often light, people
 seated for the white often light.

Manual flush function When the person is not seated, press the KNOB for flushing function.

Power switch When the person is not seated, press the 5-second button to stop the power switch for the toilet, repeat the operation can turn on the power (toilet power, switch when the display, knob, lighting, knob lights, microwave signal, foot signal to go out) .

Strength Adjustment of clamshell When a person is not seated, press the 5-second Knob to stop the power supply. Within 3 seconds, press the flip button on the remote control, and the display will pop up to adjust the flip gear, then press the remote control on the cleaning force (a total of 11 files can be adjusted cycle of force) plus + to increase the force, minus- to reduce the force, after adjusting a long 5-second button to stop the power can be set successfully.

Turn-over adjustment When a person is not seated, press the 5-second Knob to stop the power supply. Within 3 seconds, press the turn-over button on the remote control. The display will pop up to adjust the turn-over gear, then press the remote control on the cleaning force (a total of 11 files can be adjusted cycle of force) plus + to increase the force, minus- to reduce the force, after adjusting a long 5-second button to stop the power can be set successfully.

MOISTENING function Once seated, it detected that the human body's seated signal turned on the moistening wall function (turn on the upper flush for 2 seconds) . The knob rotated in the direction of the female cleaning. After 5 seconds, it let go and then pressed the flush button on the remote control within 2 seconds, can be turned on or off the toilet wall function. (after the seat from the seat less than or equal to 10 seconds of non-wetting wall, more than 10 seconds to re-wetting wall) , wetting function time 2 seconds.

5 Handling of frequently asked questions

	reason	Deal with
No squirting	Blockage caused by bending of intake hose;	Eliminate the bending of the intake hose;
	Inlet Valve closed;	Open the intake valve;
	Tap Water, no water	Waiting for water
Weak spouting	Partial blockage due to bending of intake hose;	The drain hose bends;
	Intake valve not fully open;	Fully open the inlet valve;
	Clogged Inlet strainer	Clean the inlet filter
The water is not hot	Water temperature set to room temperature;	Reset the water temperature gear;
	In standby or power-saving mode	Switch to function mode and spray after 2 minutes
Seat temperature is not hot	Set the seat temperature to normal;	Reset the setting temperature;
	In standby mode	Switch to function mode and spray after 2 minutes
The wind is not hot	Set the air temperature to room temperature	Reset the wind temperature gear
No Wind	In standby or power-saving mode	Switch to function mode to use the drying function
Spray Rod not retracted	Power cut;	Gently push the spray rod back and wait for incoming power;
	Stuck in a foreign object	removal
The boom doesn't extend out	Power cut;	Waiting for the call;
The remote doesn't show	Not Seated in the seat sensing area	Sit in the correct position. Sit in the sensing area
	Remote control battery positive and negative charge or low battery	Reload the battery and align the anode and cathode; Replace with a new battery
Pay Attention	If the failure is not eliminated after handling according to the above method, the power should be cut off, contact the service provider, please professional maintenance. If the power leakage protection switch often jumps off, that the product has leakage, please cut off the power supply, contact the service provider, please professional maintenance.	

6 Other functions

Spray rod self-cleaning function The self-cleaning function will be opened at the beginning and the end of the cleaning (for the purpose of self-cleaning the spray rod and replacing the cold water in the pipe).

Automatic drop cover function 2 minutes after the person leaves the seat, the cover is automatically closed. When there is a microwave signal, when the microwave detects the signal of someone, the cover closing time will be automatically refreshed.

Memory program Water temperature, seat temperature, wind temperature, remote control setting gear before power off memory, spray rod shift memory last operation position.

7 Provision of water and electricity

1. Open the Angle valve for water and check the tightness of the threaded joint to ensure no water leakage.
2. Power cord leakage protection plug is inserted into the power socket, press the reset switch, the plug indicator light is on, indicating power on (press the leakage test button before the first use, and the protection switch pops up, indicating normal leakage protection function)
3. When the cover plate is powered on, the spray rod is extended and then returns, while spraying water from the clean mouth; when it returns to the position, the self-clean mouth stops spraying water, the floodlight is on during the reset process, and the floodlight is off after the reset (no flushing during the reset).

8 Technical indicators

The main machine	Rated Voltage	AC 220V/50HZ
	Rated power	1030W
	Maximum power	1670W / 1270W (auto-flip / slow-drop cover)
	Water pressure range	The minimum essential water pressure is 0.07 MPA (20L / Min flow rate) and the maximum water pressure is 0.8 MPA (hydrostatic pressure)
	Power Cord	It's about 1.5 meters long
	Water consumption	5L
Cleaning device	Heating Power	1600W
	Warm water temperature	Four-speed regulation
	Cleaning flow	Five-speed regulation
	Cleaning mode	Hip Wash / mobile massage, woman wash / mobile massage
	Spray position	Five-speed regulation
	Hydraulic protection	Pressure stabilizing device and automatic pressure releasing device
	Antifouling device	Water discharge device, nozzle automatic cleaning device, anti-siphon device, anti-backflow device, filter device
Drying apparatus	Safety device	temperature sensor, overheat preventer, Thermal cutoff, earth protection, Earth leakage protection, anti-air burning device
	Warm wind speed	Greater than 4 meters per second.
	Warm Air	Four-stage regulation
	Heating Power	250W
Insulating seat ring	Safety device	Temperature sensors, overheat preventers, Thermal cutoff
	Surface temperature	Four-stage regulation
	Heating Power	50W
	Opening and closing device	Mute or auto-flip
	Prevent low temperature scald	After using for 10 minutes, the seat temperature is lowered to low gear automatically
Sweet setup	Safety device	Sitting Sensor, temperature sensor, overheat preventer, Thermal cutoff
	Night light setup	Intelligent, always out, always bright
	User Code Setting	One machine, one code, to prevent the use of multiple products multiple users, mutual interference
Liquid Crystal Display device		Real-time display of water temperature, seat temperature and wind temperature
Deodorizer		Electro-catalytic deodorization
Foot flush function		Close to the foot feel button, start the flushing function (slowly lower the cover plate)
Feel the feet turn over function		Close to the foot button, automatically open / turn over the seat ring (automatically flip over)
Microwave auto-flip function		Close to the front of the toilet, automatically open the lid, after leaving, automatically close the lid and automatically flush (automatic flip)
Product Implementation Standard		Comply with national and industry standards

PRODUCT WARRANTY

PRODUCT MODEL		CUSTOMER NAME	
SALES UNIT		DATE of PURCHASE	
INVOICE NUMBER		CUSTOMER TELEPHONE	
Distributor Stamp		DEALER TELEPHONE	
FACTORY DATE			

Thank you for choosing our products! To ensure product credibility and safeguard your consumer rights and interests, since the date of purchase (subject to the date of the purchase document), our company will provide you with a three-year free warranty service and a two-year free warranty service based on the factory date. The warranty period is based on whichever comes first, so feel free to use it.

According to the instructions and precautions for use, if a fault occurs after normal use, it will be repaired free of charge during the warranty period. During the warranty period, if you require maintenance due to a fault, you can contact the company with the warranty card for free repair or replacement (if there is no same model, a similar model is replaced, our company reserves this right).

If the warranty period is exceeded or the warranty card is lost, the company also provides repair services and charges costs.

This limited liability only applies to Mainland China (excluding Hong Kong, Macau, and Taiwan).

The limited liability of the company's products bears the company's products that are suitable for purchase, and will be repaired under the following conditions during the warranty period:

1. Damage caused by improper use, misuse or improper repairs.
2. Damage caused by moving the installation location.
3. Damage caused by fire, earthquake, flood, lightning strike, freezing and other natural disasters, pollution and gas disasters, sulfuric acid, hydrochloric acid, abnormal voltage.
4. Damage due to the use of non-specified power supply (voltage, frequency).
5. It is used for the purpose other than general home or hotel, and the damage occurred.



Cut along the dotted line

USER RECEIPT CARD

Dear customers: Thank you for choosing our products! After you purchase this product, please fill in this card carefully and send the "customer receipt card" back to our company, so that we can provide you with timely technical advice and services.

PRODUCT MODEL	
CUSTOMER NAME	
CUSTOMER TELEPHONE	
INVOICE NUMBER	
PURCHASE DATE	
SALES UNIT	
DISTRIBUTOR SEAL	